 
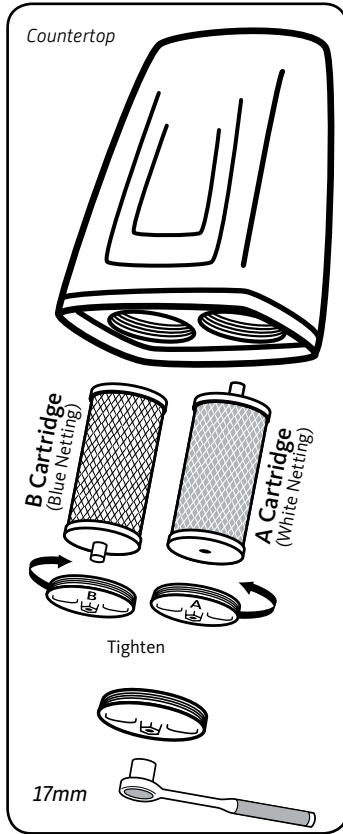 


For Countertop filters (AS-DW-CT-P)

 
1. Place unit in sink when changing filters to catch any spills. Remove the threaded filter caps by turning in the direction of the arrows. To loosen, turn A cap to the right and B cap to the left.
2. Remove old filter cartridges and dispose of them in the trash. Reuse existing large O-rings as they have a 10-year lifecycle.

Tip: to assist with "A" cartridge removal, you may use the old "B" cartridge ribs to twist "A" so it will release from the housing.

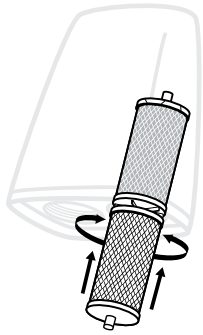

↓ proceed to step 3

3. Install the new filter cartridges.
 - Insert the "A" cartridge with the nipple-end first. Then, press and rotate to seat properly.
 - Install the "B" cartridge by inserting the nipple into the "B" cap.
4. Tighten the threaded filter caps firmly in the opposite direction of the arrows shown on the caps.
 - The "A" cap will tighten by turning it to the left.
 - The "B" cap will tighten by turning it to the right.
 - Ensure O-ring is in place.

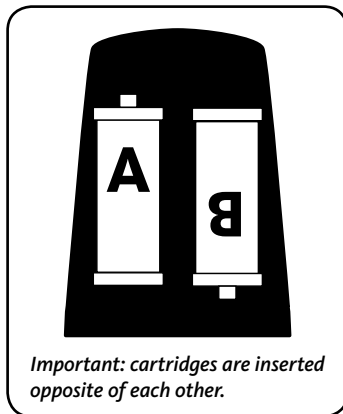

5. Turn on the cold water and check for leaks with the filter still lying flat.
 - If leaks are noticed, repeat step 3 and 4.
 - If no leaks are noticed, return the filter to the upright position and allow the water to run for 10 minutes until all cloudiness and discoloration have disappeared.
6. Enjoy the benefits of drinking clean, healthy water!

Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system.

- Conforms to NSF/ANSI 53 for VOC reduction. See performance data sheet for individual contaminants and reduction performance.
- Systems certified of cyst reduction may be used on disinfected waters that may contain filterable cysts.
- Rated service flow: 0.5 GPM.
- Rated capacity: 400 Gallons.

Austin Springs

1609 Shoal Creek #200, Austin, Texas 78701

 
 
Manufactured in Facility 1

AS-DW-R_20130218

For Under Counter filters (AS-DW-UC series)

1. Remove the hoses by pressing and holding down the gray collet ring while pulling the hose out. Place unit in sink to catch spills. Remove the threaded filter caps by turning the white A knob to the right and the blue B knob to the left.
2. Remove old filter cartridges and dispose of them in the trash. Reuse existing large O-rings as they have a 10-year lifecycle.

Tip: to assist with "A" cartridge removal, you may use the old "B" cartridge ribs to twist "A" so it will release from the housing.

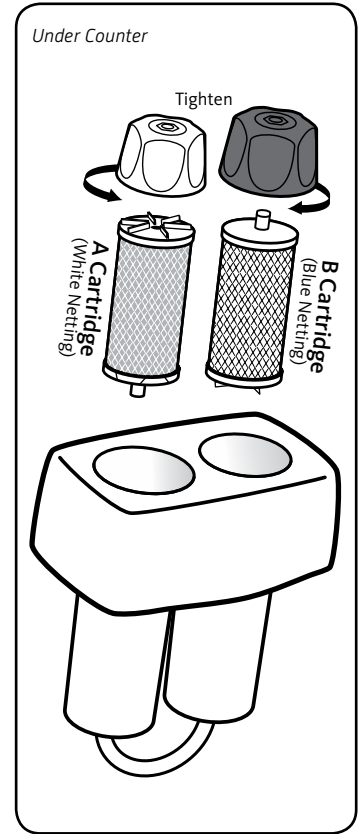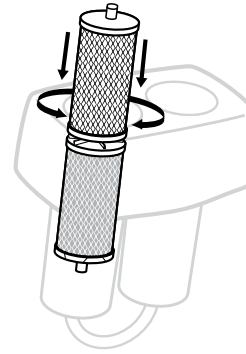

↓ proceed to step 3

AustinSprings™
clear. Refreshing. Pure.



Model AS-DW-R Replacement Cartridge Instructions

for use with AS-DW-CT-P and AS-DW-UC series



System Tested and Certified by NSF International against NSF/ANSI Standard 42 and 53 for the reduction of the claims specified on the Performance Data Sheet and at www.nsf.org.